

SPARE PARTS

SPARE PARTS - FC1347



The column "Pos." refers to the exploded drawing "TYPE FC1347".

CODE COMPONENT	POS.	COMPONENT
2000008	4	Hinge for glass lids
3000080	3	Glass lid FC1347
3000083	22	Tall rubber bushing for pan holders
3000073	1	Wire pan holder for AUX burner
3000074	1	Wire pan holder for SR burner
4000170	2	Glass lid cable gland
4000224	7	Intense black screw cap
4000008	23	Standard black knob
4000031	30	Universal nut for thermocouple
4000069	28	Thermocouple for fast-on magnet cock
4000182	19	Burner spreader for 3rd series AUX burner
4000184	20	Ø 50 enamelled cover 3rd series AUX burner
4000181	17	Burner spreader for 3rd series SR burner
4000185	18	Ø 70 enamelled cover 3rd series SR burner
4000223	8	Chipboard screw to secure the hob unit
7000138	-	Glass lid flame label
4000229	32	5 x 6 CH screw to secure the hinge and silentblock
3000770	25	Control panel label

E VERSION - ELECTRONIC LIGHTING

CODE COMPONENT	POS.	COMPONENT
4000015	-	Single-pole lighting button - ø 16 mm
2000088	-	12V generator kit + assembly bracket
4000168	-	Universal lighting cable (-)
4000169	-	IGN lighting cable L320
4000297	-	IGN lighting cable 2 (+)
4000232	-	Burner lighting glow plug L350
4000137	-	Clip for glow plug
3000770	25	Control panel label

TYPE FC1347

